



PARTS LIST		
DESCRIPTION	PART NUMBER	QTY
CONTROL PANEL	CB.D3.CAN	1
LASER RECEIVER	R.ULS.CAN	1
ELECTRIC MAST	ME.18.CAN	1
MAST CRADLE	A.ME.24	1
JOYSTICK (OPTIONAL)	JOYSTICK OPTIONS	1
HYDRAULIC CORD	A.RS.080	1
HYDRAULIC CORD	A.RS.127	1
CAN CORD	A.RS.107	1
CAN CORD	A.RS.111	1
CAN CORD	A.RS.106	1
POWER CORD	A.RS.001.NC	1
HYDRAULIC BREAKAWAY BOX	IB.DUO.HYD	1
HIRSCHMANN OR DEUTSCH CONNECTORS (OPTIONAL)	P.CONN.059/043/061	Up to 4

CAN CORD OPTIONS	
A.RS.135	1.0m
A.RS.111	2.5m
A.RS.110	5.0m
A.RS.107	10.0m
A.RS.106	Curly Cord, 1.7m un-streched; 8.5m stretched

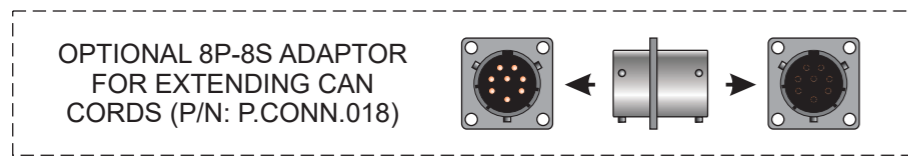

JOYSTICK OPTIONS	
A.RS.082	PROPORTIONAL JOYSTICK, AVAILABLE IN MACHINE-SPECIFIC VARIANTS
A.RS.131	JOYSTICK CORD FOR SKID STEER, BARE WIRE
A.RS.052	REMOTE CONTROL AUTO/MAN UP/DOWN

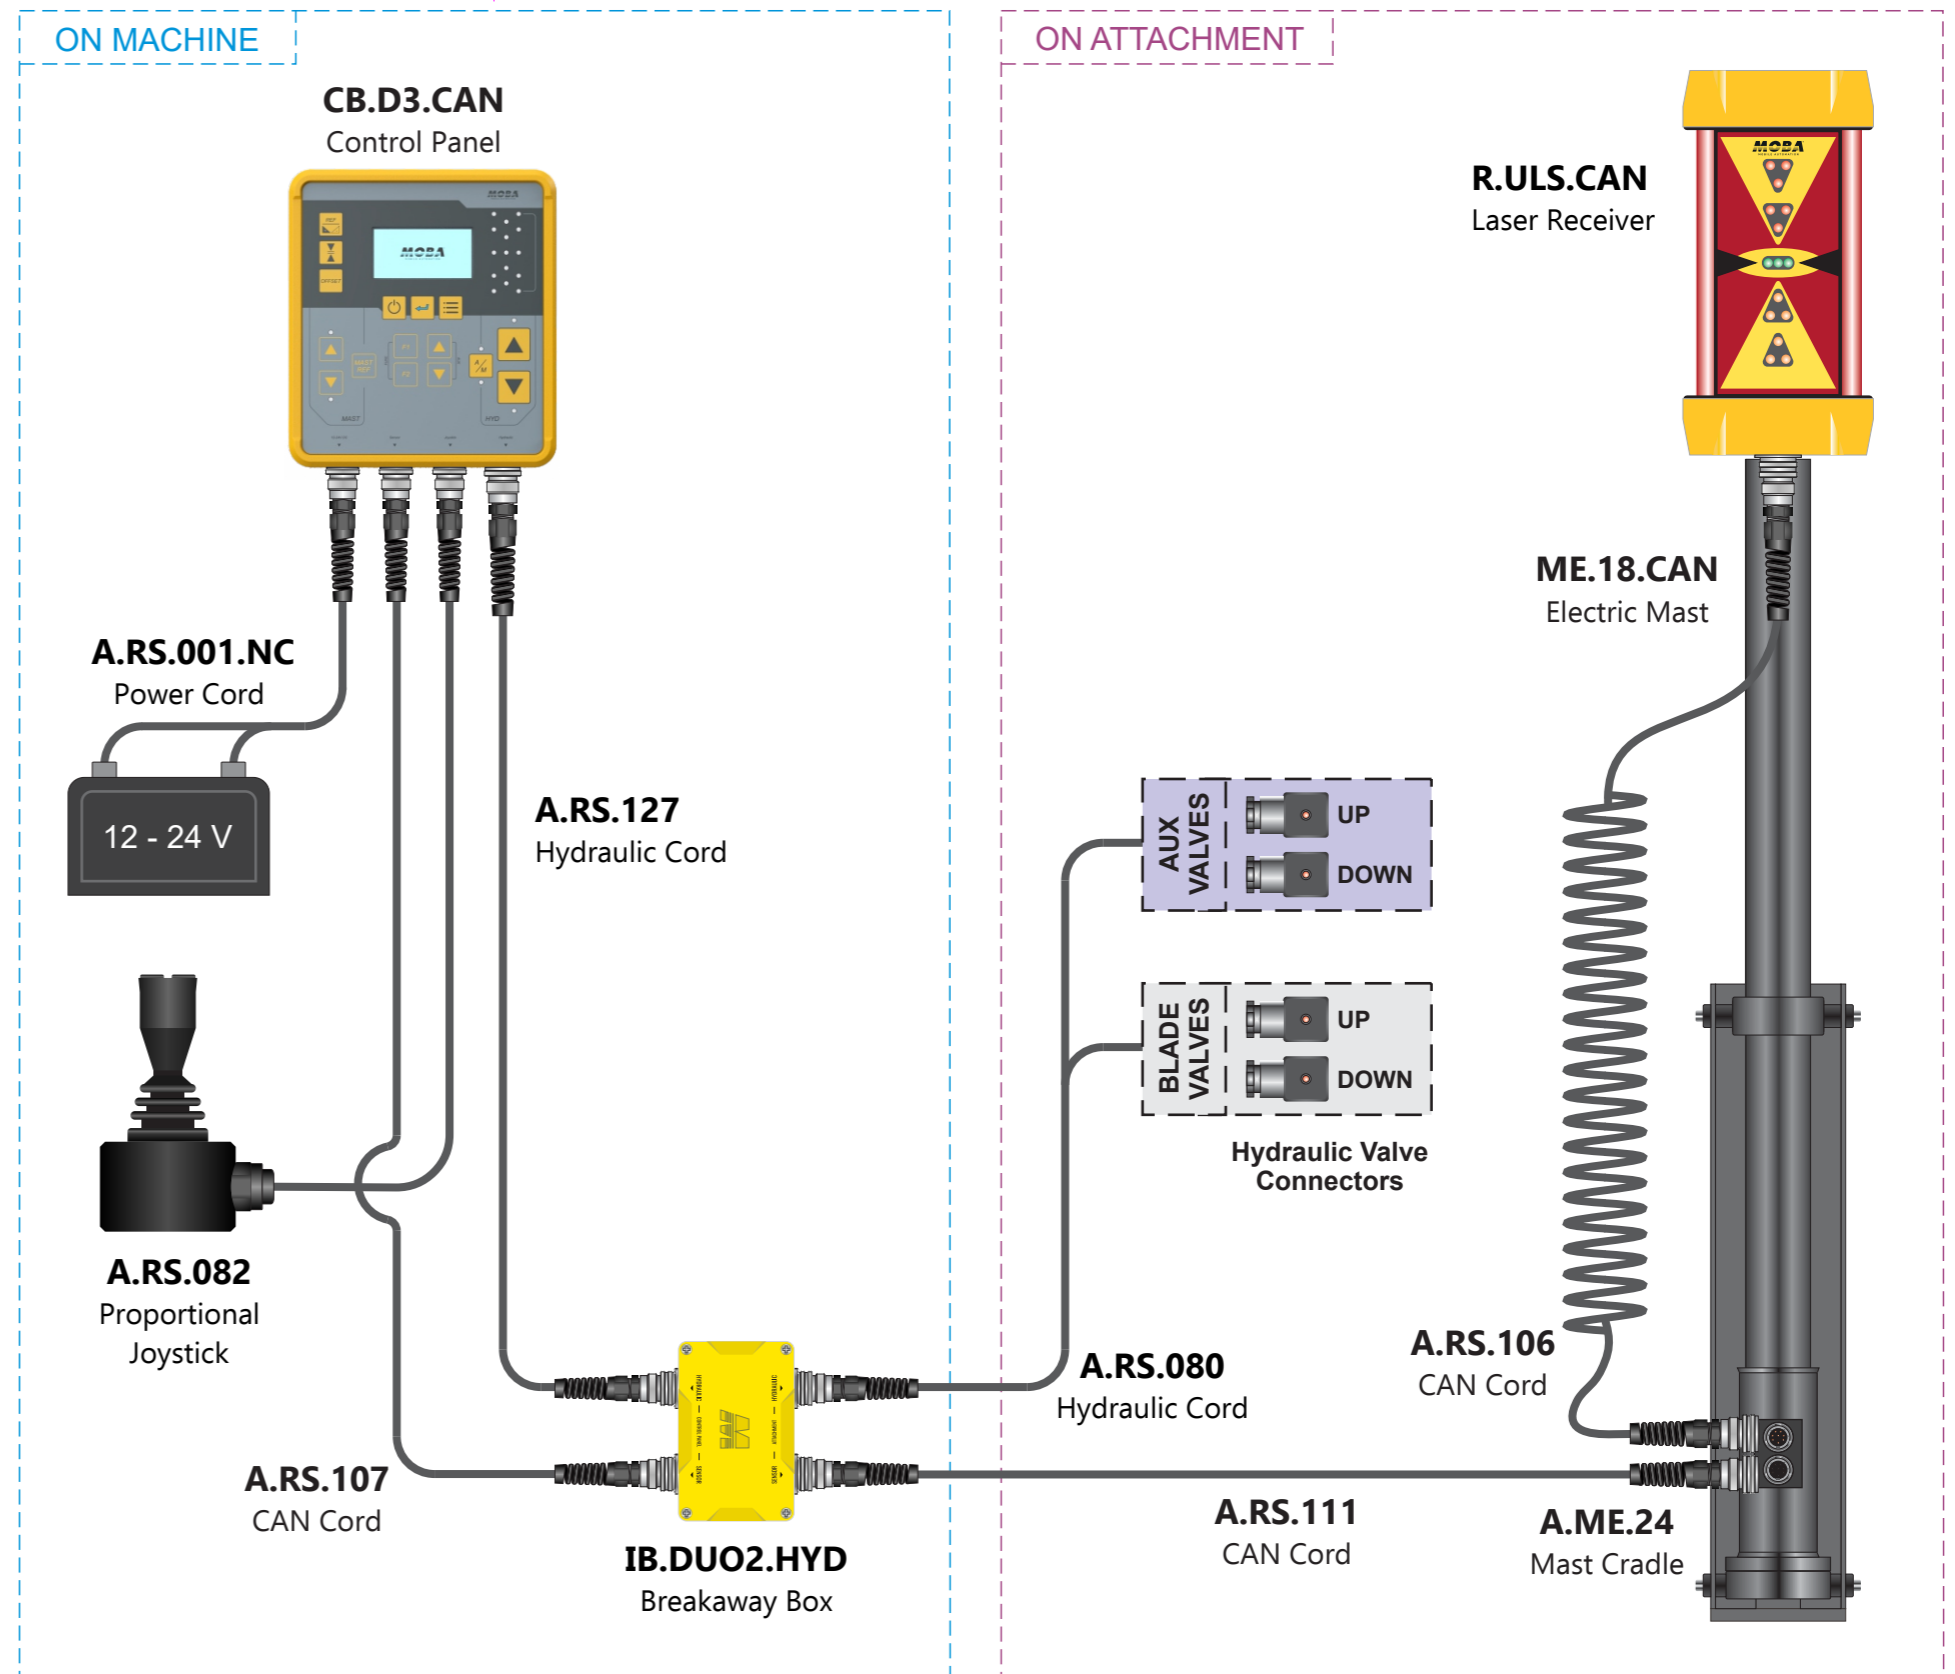

RevNo	Revision note	Date	Signature	Checked	Tolerances	Path: \1-ADM\Product Documents\Setup Diagrams\Receiving Systems\					
1	Rearranged to be consistent with the rest of the setup diagrams.	03/02/21	N.A.	D.R. & C.R.	Unless Stated:	Material:		Finish:			
2	Changed mast cradle to A.ME.01. Updated the template.				xx.x = +/- 0.1	Drawn by:	Checked by:	Unit:	aumoba Code:	Date:	Scale:
3	Updated graphics and cable and sensor options	4/08/25	T.K.	D.R.	xx.xx = +/- 0.05	N.A.	D.R.		RS.033 W/ BREAKAWAY	24/04/26	NTS
4	Updated to V3 control panels, IB boxes and Ni plated connectors	24/04/26	T.K.	D.R. & C.R.	xx.xxx = +/- 0.02				Title: SETUP DIAGRAM FOR CB.D3.CAN WITH LASERGUIDE, ELECTRIC MAST & HYDRAULIC BREAKAWAY		
									Drawing No:	Version:	Sheet:
										4	1/1